



USAGE OF ELECTRICAL APPLIANCES

CONTENTS

TV 2

TV [ROOM 201 ONLY] 2

AIR CONDITIONER 3

HOT WATER SUPPLY 4

MICROWAVE / TOASTER 5

RESTROOM 6


T V [EXCEPT ROOM 201]




T V [ROOM 201 ONLY]




AIR CONDITIONER

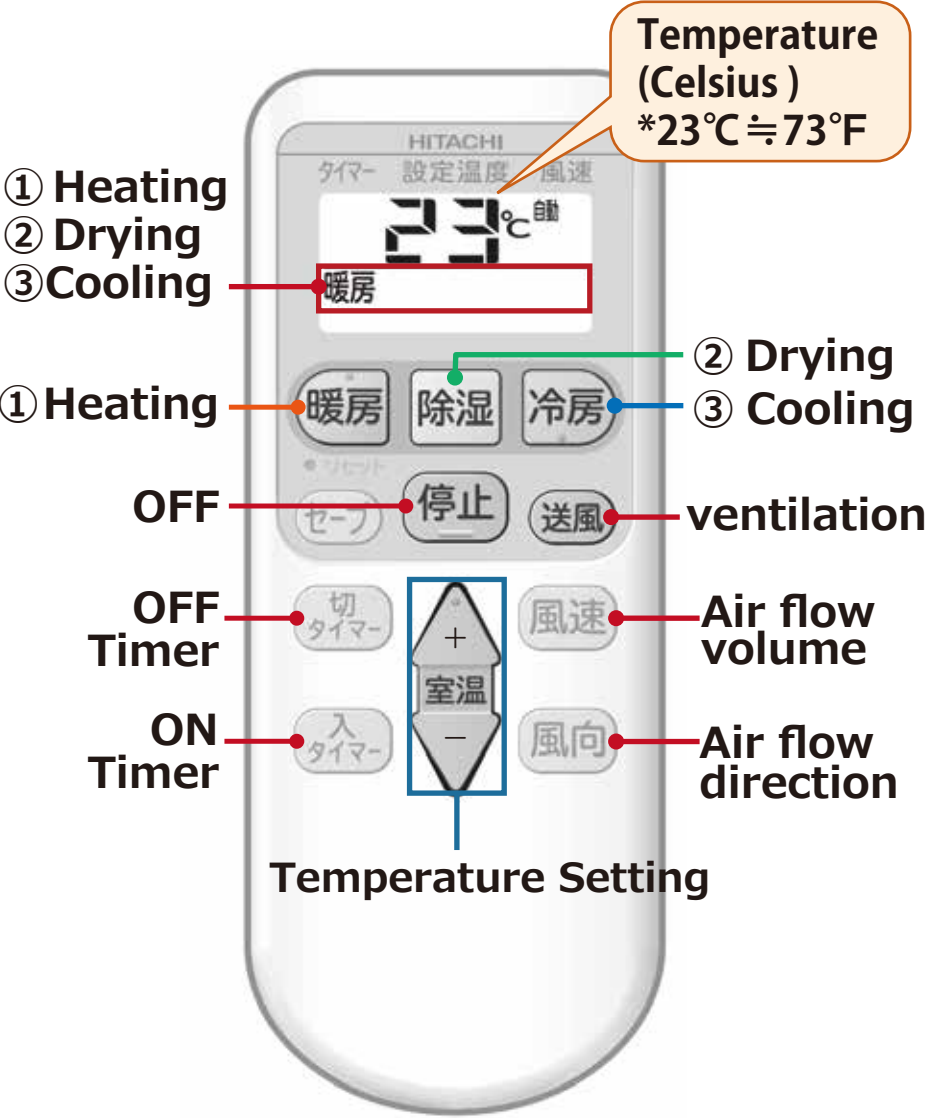

HOT WATER SUPPLY @KITCHEN

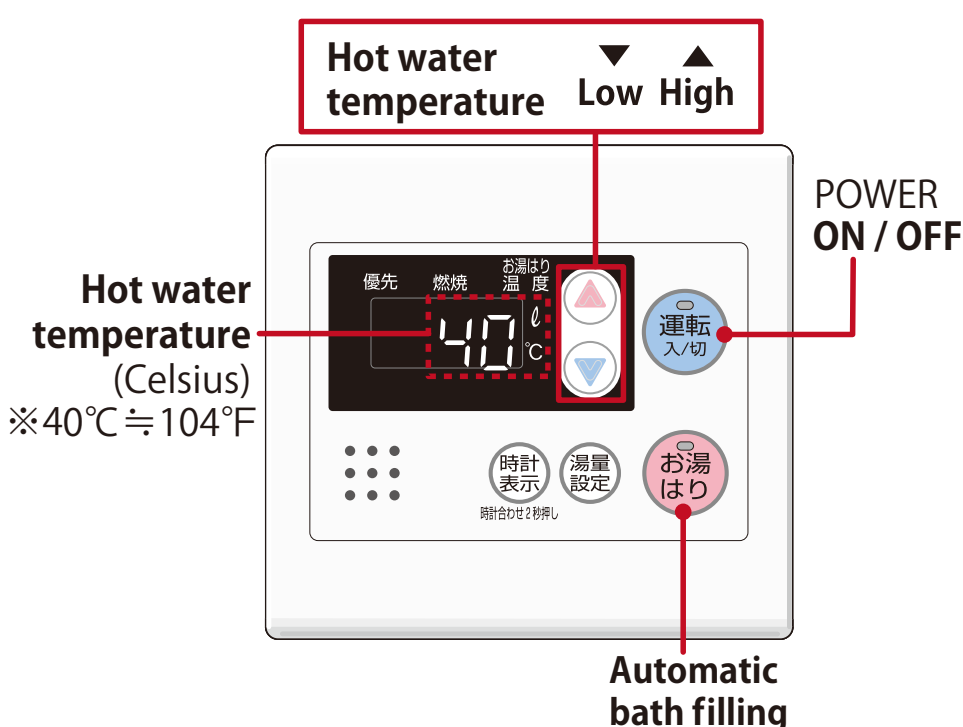


HOT WATER SUPPLY @BATHROOM

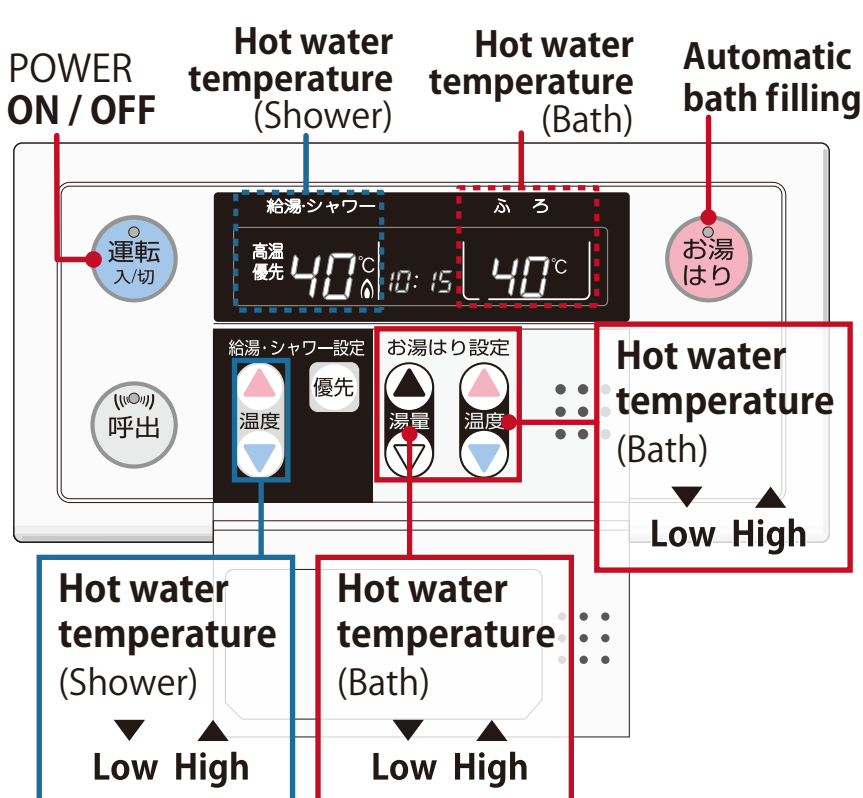

⚠ Please do not turn off the power of the hot water supply at any time (when switched on you will see two temperature figures). The two remote control panels in the bathroom and the hallway are fully synchronized.

- If you turn off the power on either remote control panel, there will be no hot water available in the entire house.
- If somebody is in the bathroom, only this person should adjust the temperature settings.

How to use the Automatic bath filling

- 1** Press the 'Automatic bath filling' button.
“お湯張り” ボタン押す

- 2** When the audio guidance is played, press the tap down to release the hot water.
「給湯栓を開けてください」という音声の流れたら浴槽のお湯の蛇口を開けてお湯を出す



- 3** When the hot water stops, return the tap to its original position.
お湯が止まったら、蛇口を閉めてください

MICROWAVE / TOASTER

How to use the MICROWAVE:

- 1 POWER**
Turn the dial to set the desired wattage.
- 2 TIMER /m**
Turn the dials to set the desired time.




How to use the TOASTER

- 1 Temperature**
Turn the dial to set the desired temperature.
- 2 TIMER /m**
Turn the dial to set the desired time.
* To set the time to 10 minutes or less, turn the dial to 11 minutes or more and then set the desired time.



RESTROOM

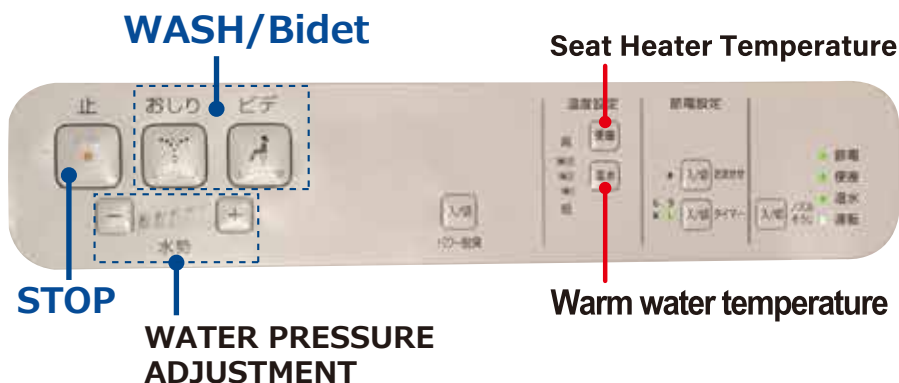

おしり



Washing the rear.

ビデ



Bidet

OSCILLATING

- If you press the button again during use, the wand moves back and forth so that you can wash your rear thoroughly.

! Please do not flush too much toilet paper.
It can cause the toilet to clog or break.

If necessary, please flush more than once during use. Do not flush anything other than the toilet paper provided.

! 一度に大量の紙を流すと詰まりや故障の原因となります。
数回に分けてお流してください。