

# USAGE OF ELECTRICAL APPLIANCES

## CONTENTS

### COMMON ELECTRICAL APPLIANCES

TV . . . . .	2
INDUCTION HEATING . . . . .	3
INTERCOM . . . . .	3
MICROWAVE / OVEN / TOASTER . . .	4
BATHROOM DRYER . . . . .	5


### BANK QUAD ROOM

AIR CONDITIONER . . . . .	6
RESTROOM . . . . .	7
(ROOM 101 IS ON PAGE 9 →)	


### FAMILY SUITE ROOM

AIR CONDITIONER . . . . .	8
RESTROOM . . . . .	9

# TV

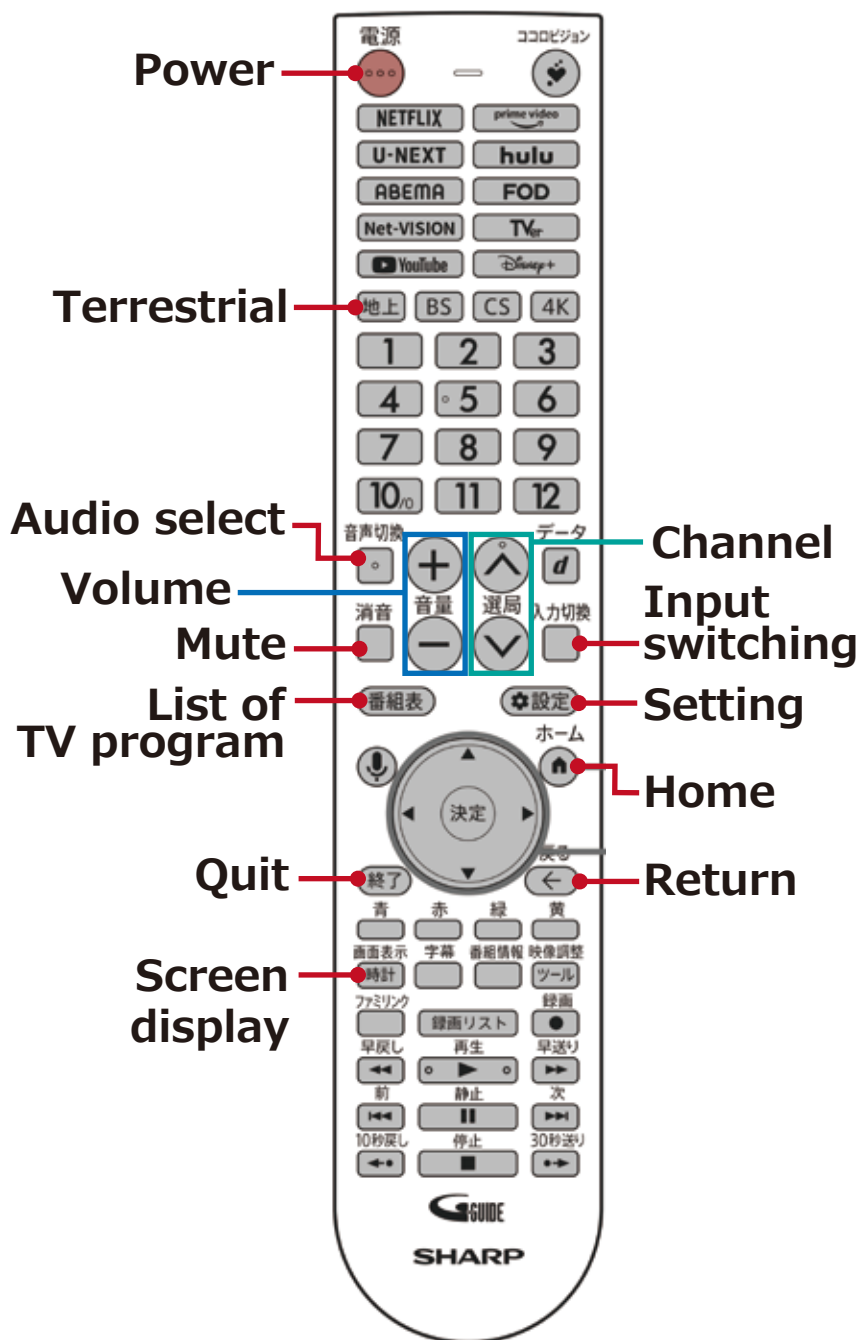

# INDUCTION HEATING

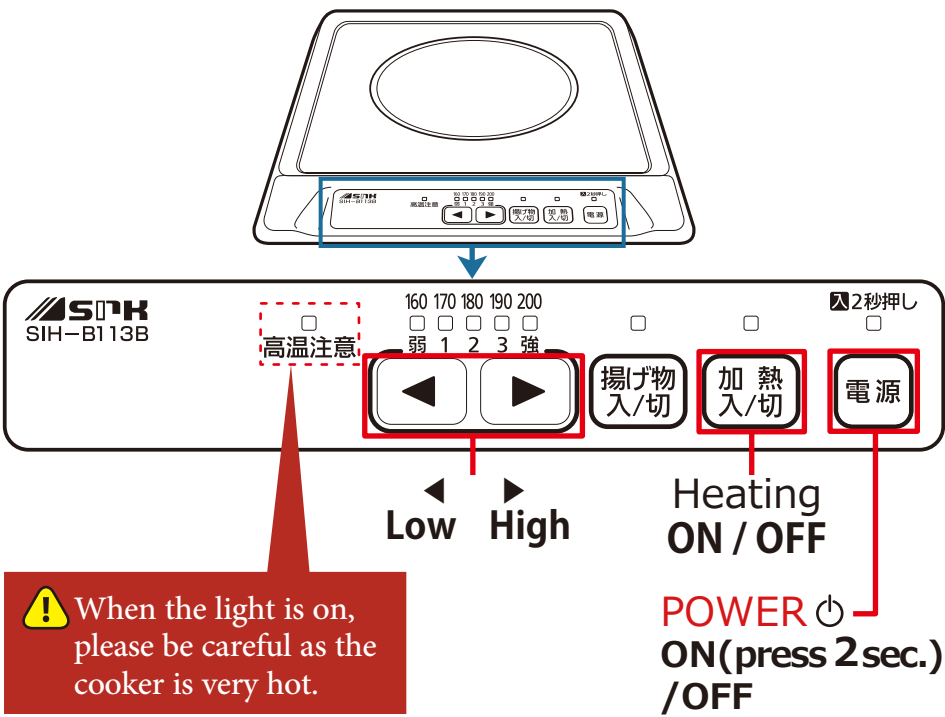

## HOW TO USE

- 1 Please put the cookware on the heating area before turning on the Induction Cooker.
  - 2 Once you turn on the cooker, turn on the heating to adjust the heat temperature to: High or Low
- ⚠ Please make sure to turn on the fan in the kitchen when cooking. Cooking without the fan may cause the fire alarm to go off.

# INTERCOM



# MICROWAVE / OVEN / TOASTER

## How to use the MICROWAVE:


- 1 Choose the amount of time by pressing the time buttons. ( Ex. 2 minutes = Press the 1 min. button 2 times )
- 2 Press the WARM START button to start heating. Press CANCEL to stop early.

You can choose the matching button to heat these items.

Heating time is automatic.

1: Toast / 2: Drink / 3: Frozen food /  
4: Bento Box / 5: Steamed vegetables /  
6: For frozen items

**!** Please do not use the black square plate when microwaving.  
温めの際には、黒い角皿は使用しないでください。

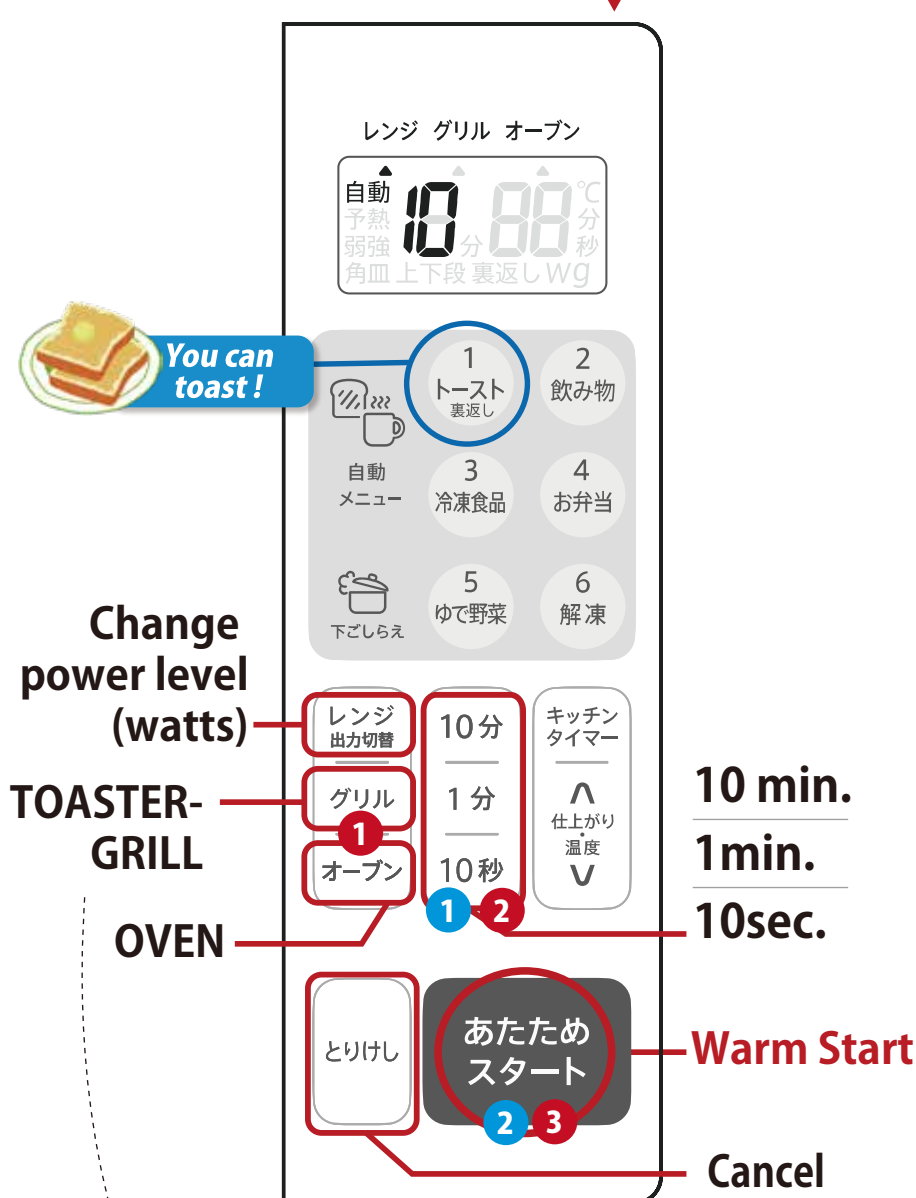

## How to use the GRILL or OVEN:

- 1 Choose the TOASTER-GRILL or OVEN button.
- 2 Set the time. ( Ex. 30 minutes = Press the 10 min. button 3 times )
- 3 PRESS WARM START button to start heating. Press CANCEL to stop early.

# BATHROOM DRYER

**OFF**

※Long press :  
Full stop

**Timer  
setting**

**Air flow  
volume**

**Low High**  
弱 強

**24-hour  
ventilation**



**Heat**  
High/Low

**Dry**  
High/Low


**Cool air**  
High/Low

**Ventilation**  
High/Low



# RESTROOM (ROOM 101 IS ON PAGE 9 →)

## WASH/Bidet

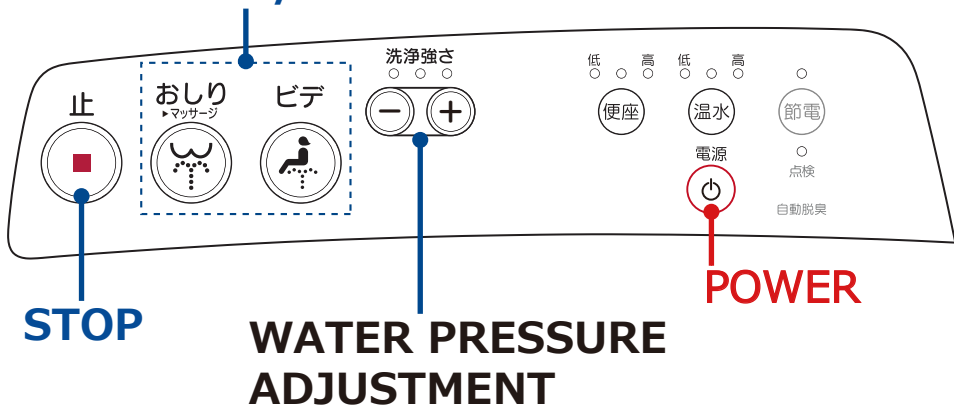

おしり



Washing the rear.

ビデ



Bidet

## OSCILLATING


- If you press the button again during use, the wand moves back and forth so that you can wash your rear thoroughly.

**!** Please do not flush too much toilet paper.  
It can cause the toilet to clog or break.

If necessary, please flush more than once during use. Do not flush anything other than the toilet paper provided.


**!** 一度に大量の紙を流すと詰まりや故障の原因となります。  
数回に分けてお流しください。

# AIR CONDITIONER

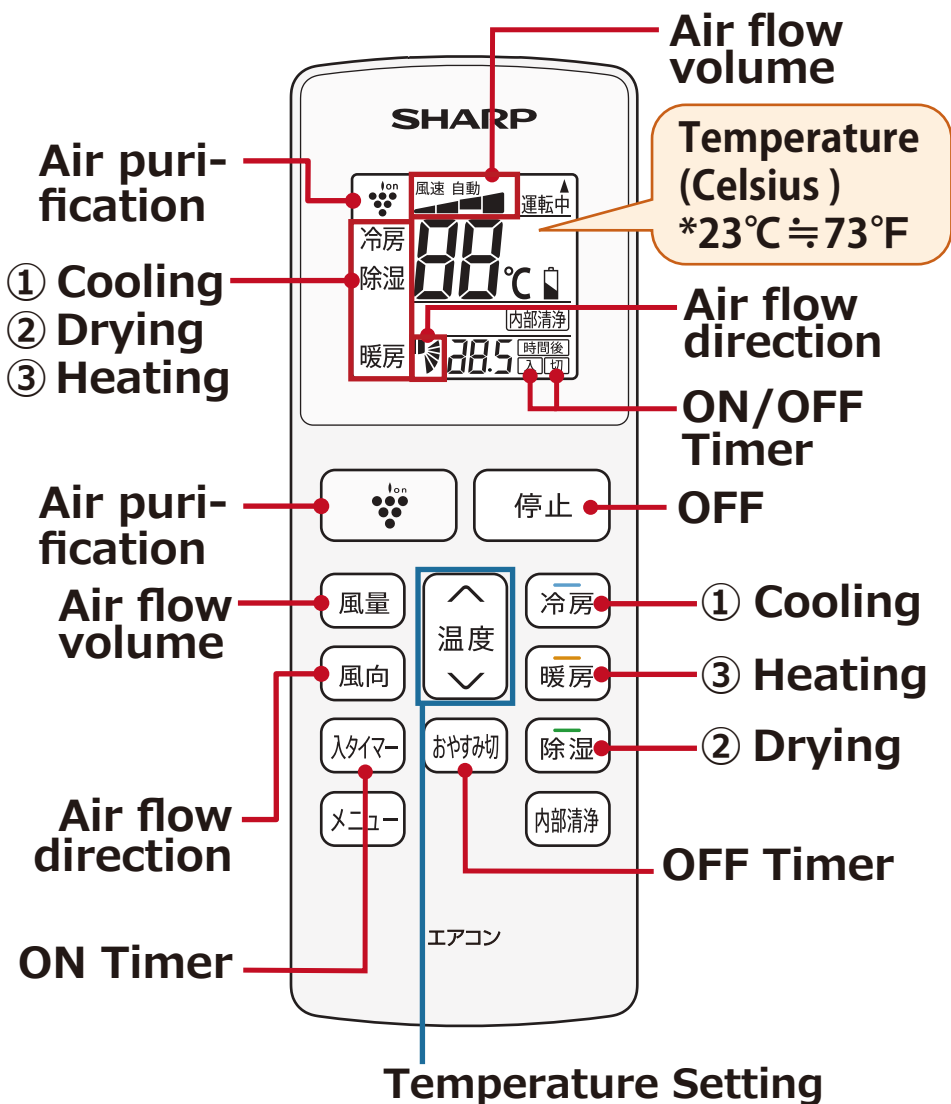



# RESTROOM

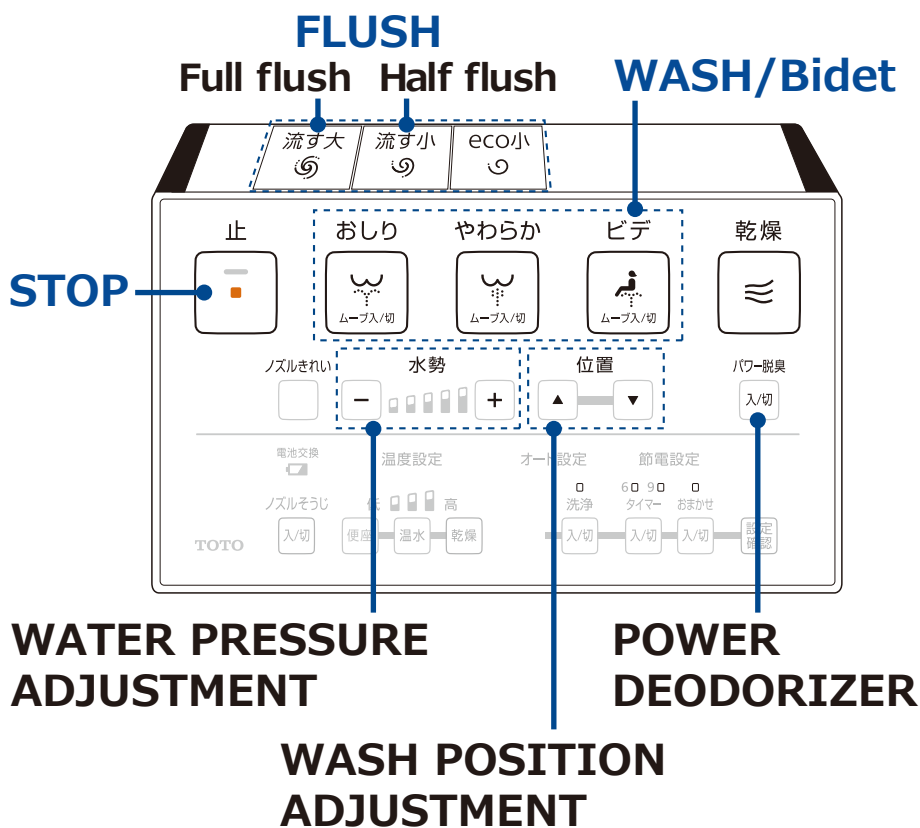

おしり  
  
ムーブ入/切  
**Washing the rear.**

やわらか  
  
ムーブ入/切  
**Mild washing the rear.**

ビデ  
  
ムーブ入/切  
**Bidet**

## OSCILLATING

- If you press the button again during use, the wand moves back and forth so that you can wash your rear thoroughly.

**⚠ Please do not flush too much toilet paper. It can cause the toilet to clog or break.**

If necessary, please flush more than once during use. Do not flush anything other than the toilet paper provided.

**⚠ 一度に大量の紙を流すと詰まりや故障の原因となります。数回に分けてお流しください。**