

USAGE OF ELECTRICAL APPLIANCES

CONTENTS


COMMON THE FACILITIES

TV	2
AIR CONDITIONER	2
INTERCOM	3
TOILET	3
MICROWAVE / OVEN / TOASTER . . .	4
INDUCTION HEATING	5
VENTILATION FAN FOR A KITCHEN .	5
WASHING MACHINE	6
BATHROOM DRYER	6

TV



AIR CONDITIONER

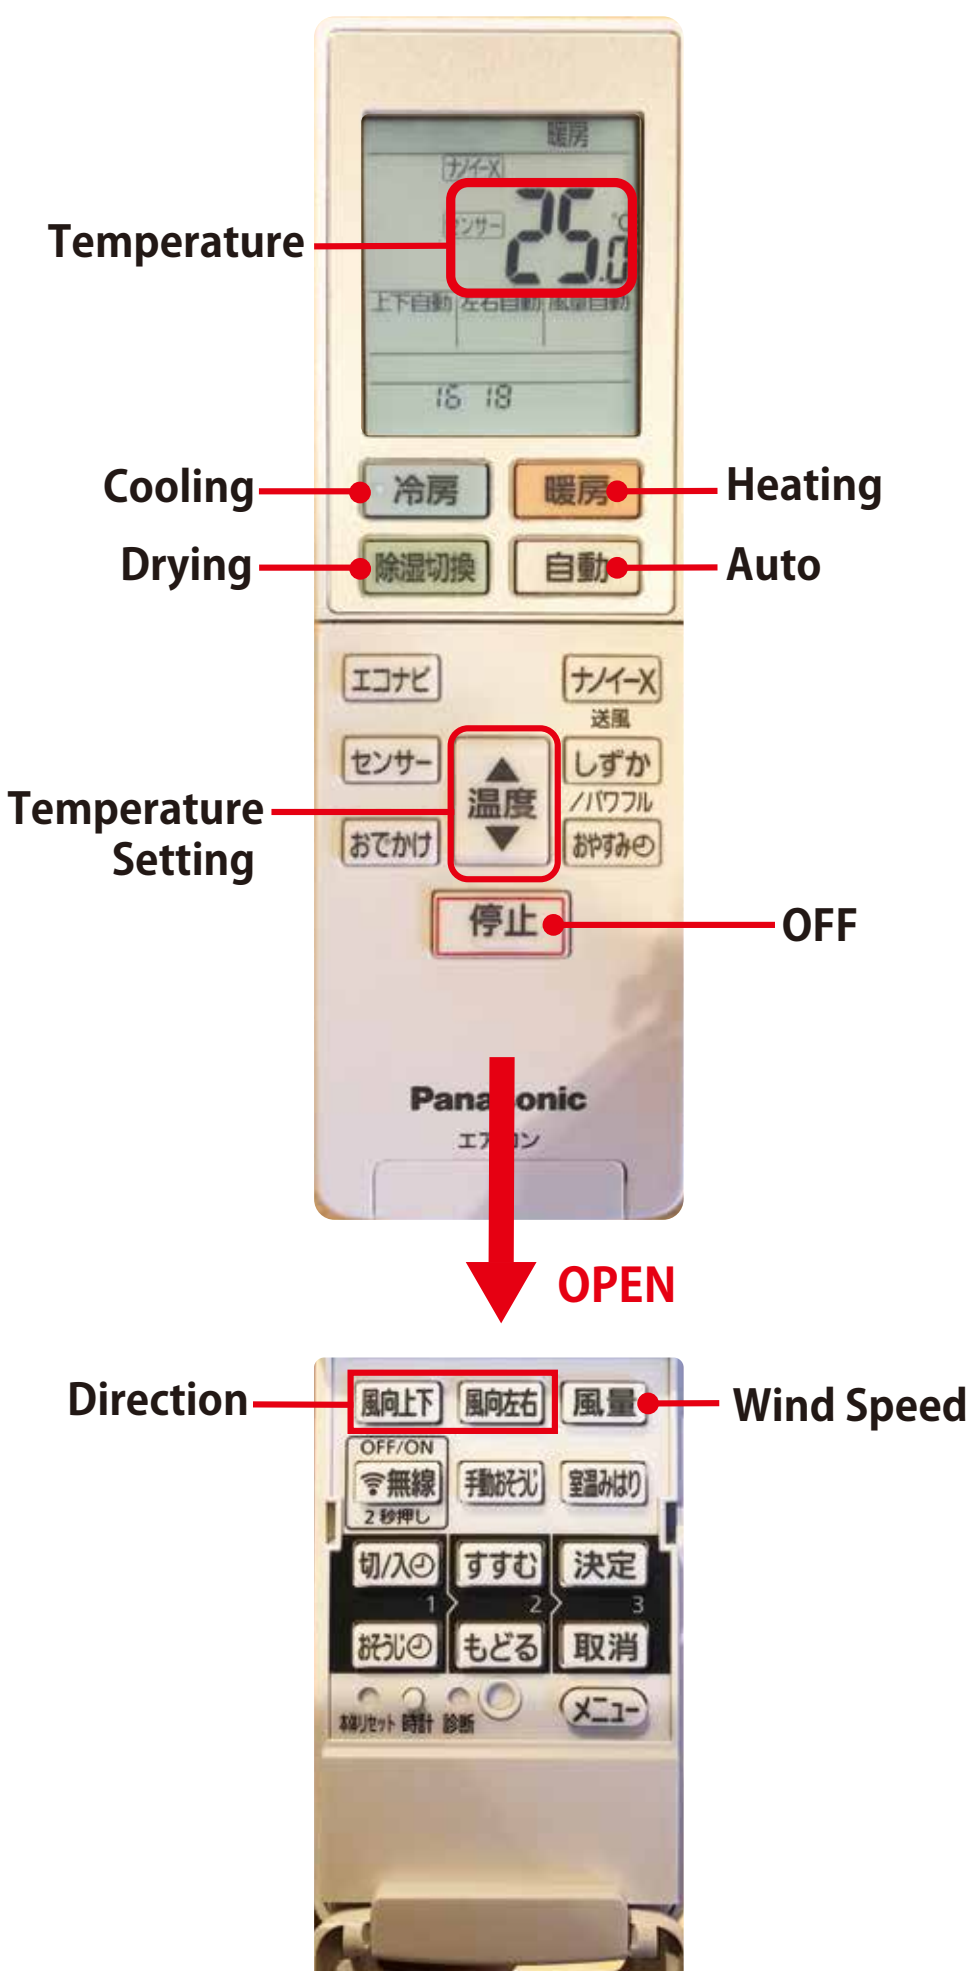

INTERCOM




Unlock the entrance door

Talk

Finish

TOILET

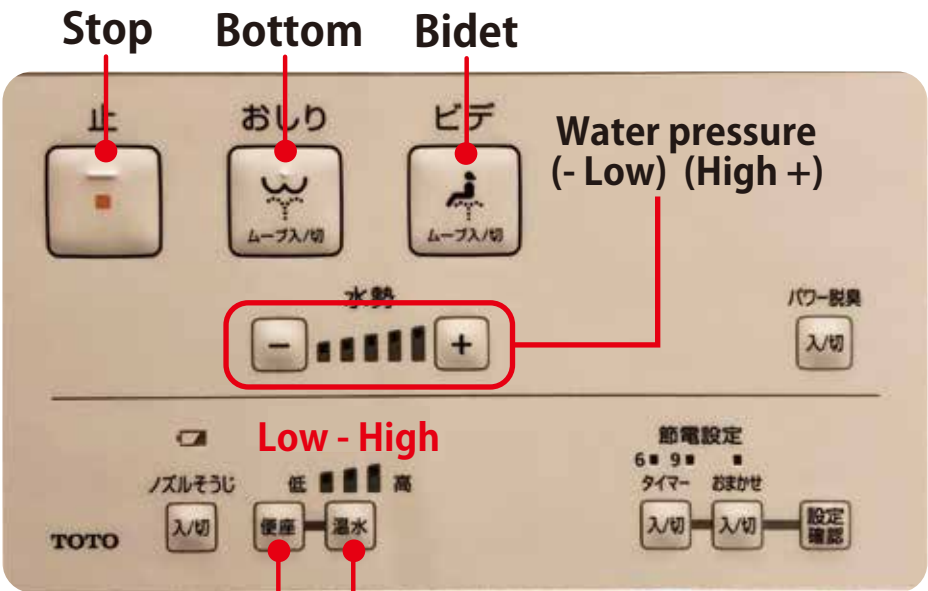

Stop

Bottom

Bidet

Water pressure
(- Low) (High +)

Low - High

Seat temperature

Warm water temperature

MICROWAVE / OVEN / TOASTER

How to use the MICROWAVE:

- 1 Choose the amount of time by pressing the time buttons. (Ex. 2 minutes = Press the 1 min. button 2 times)
- 2 Press the WARM START button to start heating. Press CANCEL to stop early.

You can choose the matching button to heat these items.

Heating time is automatic.

1: Toast / 2: Drink / 4: Bento Box /
5: Steamed vegetables
For frozen items, please press 7: THAW

! Please do not use the black square plate when microwaving.
温めの際には、黒い角皿は使用しないでください。



You can toast!

*Press the button twice to toast two pieces of bread.


To warm milk or sake

Bento Box

OVEN

TOASTER-GRILL

*Change power level (watts)

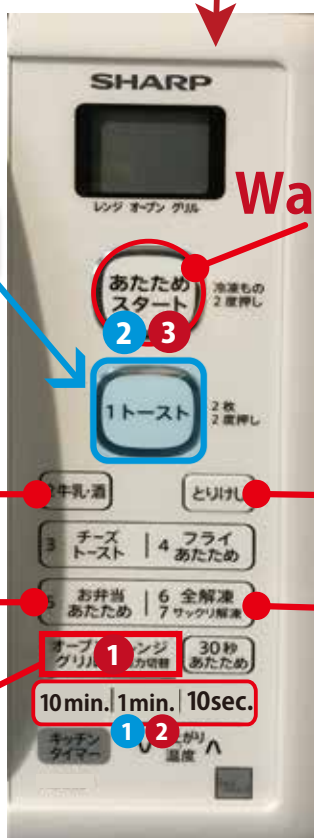

Warm Start

*Frozen items: press twice.

Cancel

THAW

How to use the GRILL or OVEN:

- 1 Choose the TOASTER-GRILL or OVEN button.
- 2 Set the time. (Ex. 30 minutes = Press the 10 min. button 3 times)
- 3 PRESS WARM START button to start heating. Press CANCEL to stop early.

INDUCTION HEATING



HOW TO USE

- 1 Please put the cookware on the heating area before turning on the Induction Cooker.
- 2 Once you turn on the cooker, turn on the heating to adjust the heat temperature to: High or Low.

Please make sure to turn on the fan in the kitchen when cooking.
Cooking without the fan may cause the fire alarm to go off.


VENTILATION FAN FOR A KITCHEN

***Please turn on the fan above the stove whenever you cook.**



WASHING MACHINE

※Washing machine is fully automatic

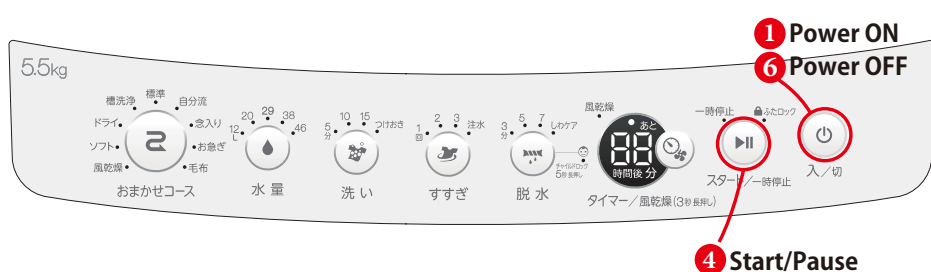

HOW TO USE

- 1 Press Power ON button.
 - 2 Put the one detergent ball into the drum.
 - 3 Put the clothes into the drum.
 - 4 Press Start button.
 - 5 When the washing is completed, the machine is automatically stopped with buzzer sounds.
 - 6 Power off.
- ※Drying function is not available.

Laundry Detergent

- Please use one detergent ball for one time.
- Please be sure to put in the detergent ball before putting in the clothes.




Caution 1 ball for 1 time

※Throw the detergent gel ball into the washing machine as is. Do not break it open.

BATHROOM DRYER

Heating
ON

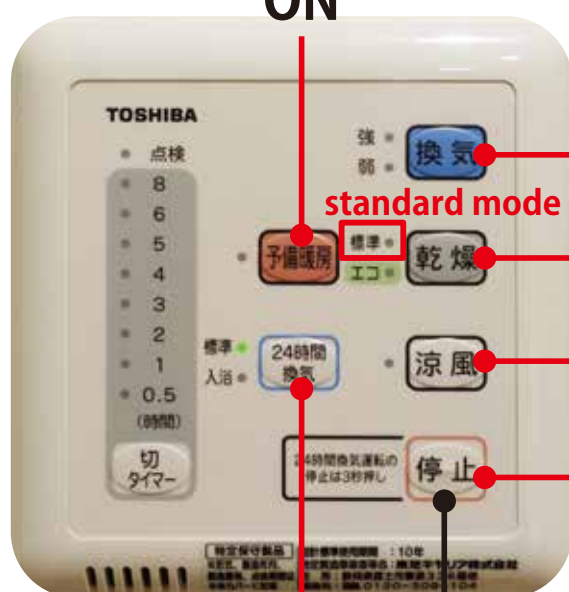

Ventilator
ON

Clothes dryer
ON

Cooling
ON

Power OFF
(hold down)

24-hour ventilation

(Hold the button three seconds to release.)



Choose the **standard mode**.
*The settings will change every time the button is pressed.

※Please hang your laundry here to dry